

EBS-2500 Printer – First Steps



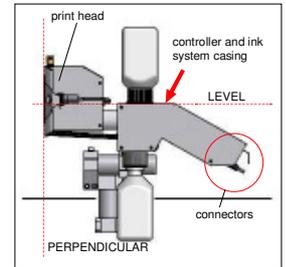
The printer shall be installed and used in such a position that the line determined by the surface of the ink system casing – indicated with an arrow in the figure on the right – forms the level, and the butting face of the head forms the perpendicular. Power and Ethernet connections are located under a cover, on the back panel of the printer.

The printer should be energised with the following mains supply:

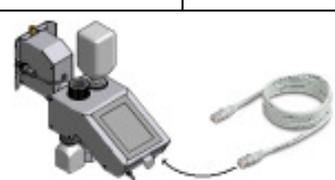
- Rated voltage 100-240V ~,
- Frequency 50-60Hz.

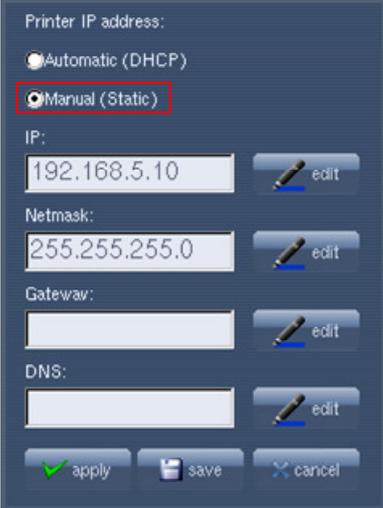


Connection of bottles and other elements is described in help text that is available after the info symbol has been pressed on the printer management panel (see **STEP 7** below).



First Configuration of the Printer

| | Direct connection with computer | Connection with Ethernet |
|---------------|---|---|
| STEP 1 |  <p>Set the parameters of network connection in your computer:</p> <ul style="list-style-type: none"> • IP Address: 192.168.5.2 • NetMask: 255.255.255.0 <p>In case of problem, contact your administrator.</p> |  <p>Get the following information from your network administrator:</p> <ul style="list-style-type: none"> • IP Address assigned to your printer • NetMask • Gateway IP Address • DNS IP Address |
| STEP 2 | <p>Connect the printer and computer via an Ethernet Crossover Cable.</p> |  <p>Link the printer into the Ethernet. Consult the required type of connecting cable with your network administrator.</p> |
| STEP 3 | <p>Switch the printer on with the switch key located on the right-hand side of the printer control panel.</p> <p>When the printer starts working, a user selection screen is displayed.</p> |  <p>Switch the printer on with the switch key located on the right-hand side of the printer control panel.</p> <p>When the printer starts working, a user selection screen is displayed.</p> |
| STEP 4 | <p>Log in by touching the Administrator icon and entering the password: "1".</p> <p>After you have logged in successfully, main user interface appears.</p> |  <p>Log in by touching the Administrator icon and entering the password: "1".</p> <p>After you have logged in successfully, main user interface appears.</p> |

| | Direct connection with computer | Connection with Ethernet |
|---|--|---|
| STEP 5 | <p>Modify the network configuration parameters in the printer.</p> <p>In the main user interface window select Settings.</p> <p>Set the following parameters:</p> <ul style="list-style-type: none"> • Printer IP Address: Manual (Static) • IP: 192.168.5.10 • NetMask: 255.255.255.0 • Gateway: leave it empty • DNS: leave it empty <p>Press the Save button in order to get the parameters set and saved.</p> |  <p>If DHCP software runs in your network, the network should be configured automatically. Go to STEP 6.</p> <p>If no DHCP software runs on the network, select Settings in the main user interface window and then set the following:</p> <ul style="list-style-type: none"> • IP Address: Manual (Static) <p>and the following parameters:</p> <ul style="list-style-type: none"> • IP • Netmask • Gateway • DNS <p>as you did in STEP 1.</p> <p>Press the Save button to get the parameters set and saved.</p> |
| STEP 6 | <p>Check whether the network is configured correctly.</p> <p>To this end select Service in the main user interface window.</p> <p>The IP: field shows the current IP address of the printer.</p> |  <p>Check whether the network is configured correctly.</p> <p>To this end select the Service option in the main user interface window.</p> <p>The IP: field shows the current IP address of the printer.</p> |
| STEP 7 | <p>In your WWW browser open the site at the address: http://192.168.5.10</p> <p>The start up page of the printer management panel should be displayed.</p> |  <p>In your WW browser open the site at the address:</p> <p>http://printer_ address, where "printer_ address" is the IP address established in STEP 6.</p> <p>The start up page of the printer management panel should be displayed.</p> |
| <p>More information on printer operation and configuration is available in help text that can be viewed after the information symbol ⇨</p> <div style="text-align: right;">  </div> | | |